

MaxSalus

Turn space into value






Modularity
Dynamic
Ergonomic
High Standards
Clean Design

Pegasus Medical is the partner of leading healthcare organizations and hospitals on 5 continents.

our clients recommend our products and solutions as we greatly simplify the management of healthcare materials with flexible and scalable solutions. We provide significant cost savings and stand back up our methodology with unrivaled expertise and support.

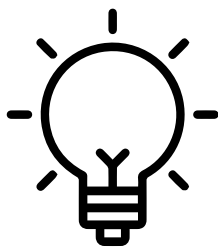

Innovation

We are constantly researching in this field and developing new products and solutions



Quality

and ensuring the highest quality of the materials we use in our products



Cost-effective


While fully connecting with market prices to create a product accessible to everyone

SALUS

Product lineup

Salus cart

Aluminum Storage Modules
ISO6040 Transport Carts

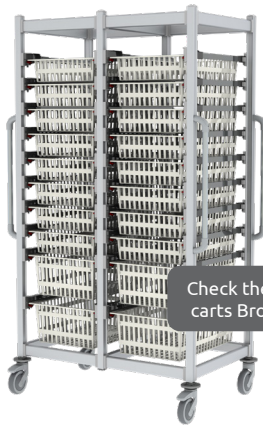

Check the Salus
carts Brochure

TopSalus

Shelving System



MaxSalus

Anti-microbial Storage
Shelving System



On this Catalog

TopSalus +

Storage System Aluminum
Shelves Integrated with Storage
Modules ISO6040



MaxSalus +

Anti-microbial Storage System
Aluminum Shelves Integrated
with Storage Modules ISO6040



Check the MaxSalus Plus Catalog

Each product group
is available in a
variety of sizes and
configurations

Turn space into value

With **MaxSalus** - Antimicrobial storage shelving system







with Injected Antimicrobial supplement




* Weight capacity not applicable when used with casters

Salus Strengths



	MaxSalus Stationary	MaxSalus Mobile	TopSalus Stationary	TopSalus Mobile
Corrosion protection	✓	✓	✓	✓
Cleanability	✓	✓	✓	✓
Competitive price	✓	✓	✓	✓
Antimicrobial supplement	✓ 	✓ 		
Temperature range	-22°F (-30°C) +194°F (+90°C)	-22°F (-30°C) +194°F (+90°C)	-22°F (-30°C) +194°F (+90°C)	-22°F (-30°C) +194°F (+90°C)
Unit capacity	2200 lbs. [1000Kg]	550 lbs. [250Kg]	2200 lbs. [1000Kg]	550 lbs. [250Kg]


Durable aluminum structure

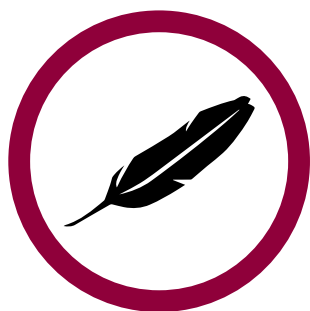

Lightweight



Easy to clean

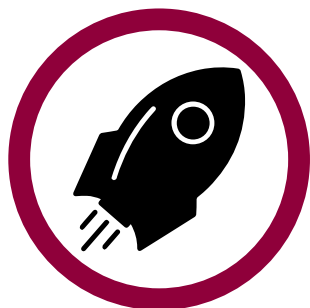


Fast, easy
assembly



Up to 550 lb (250 kg) per
shelf, equally spread.
(Stationary column Only)



Will Not Rust

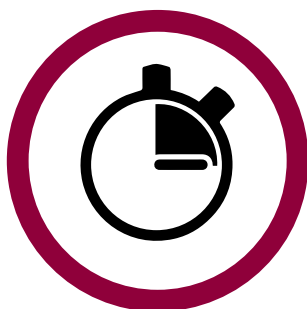

Extremely
Durable


Does not rust! & Easy to clean

MaxSalus Shelves

The shelves series with antimicrobial supplement, easy to adjust, made of polymer and aluminum.



with the
antimicrobial
supplement

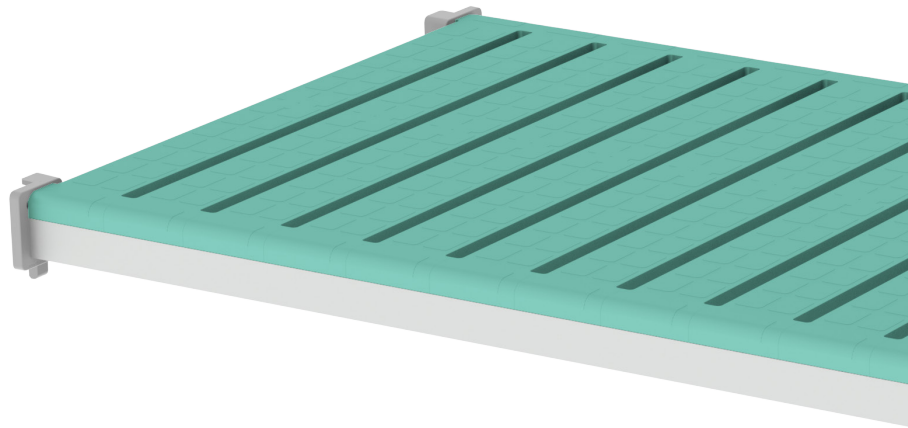


TopSalus Shelves

Our standard polymer and aluminum shelves are Lightweight and Easy to clean.



A RELIABLE CHOICE

Medical storage requirements are extensive and constantly increasing. repeated inspection visits are costly; therefore, it is good to avoid them.

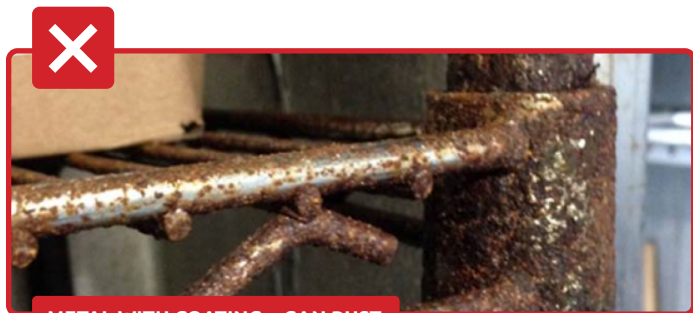

METAL WITH COATING = CAN RUST



ALUMINUM WITH POLYMERS = NO RUST

Due to the cleaning and disinfection needs required in hospitals, coated metal will rust over time when cleaning and disinfecting the product with a damp wipe or rinsing, whereas aluminum and plastic are not likely to rust.

STEP 1 - SIDE FRAMES

FRAME HEIGHTS (H)





North American market:
Stock for the North American market are available in three heights



European market:
Stock for the European market are available in five heights

i EASY TO CLEAN

The shelves are designed to start from a height of 32 cm (12.6") to leave an easily accessible cleaning space of 26.5cm (10.4")

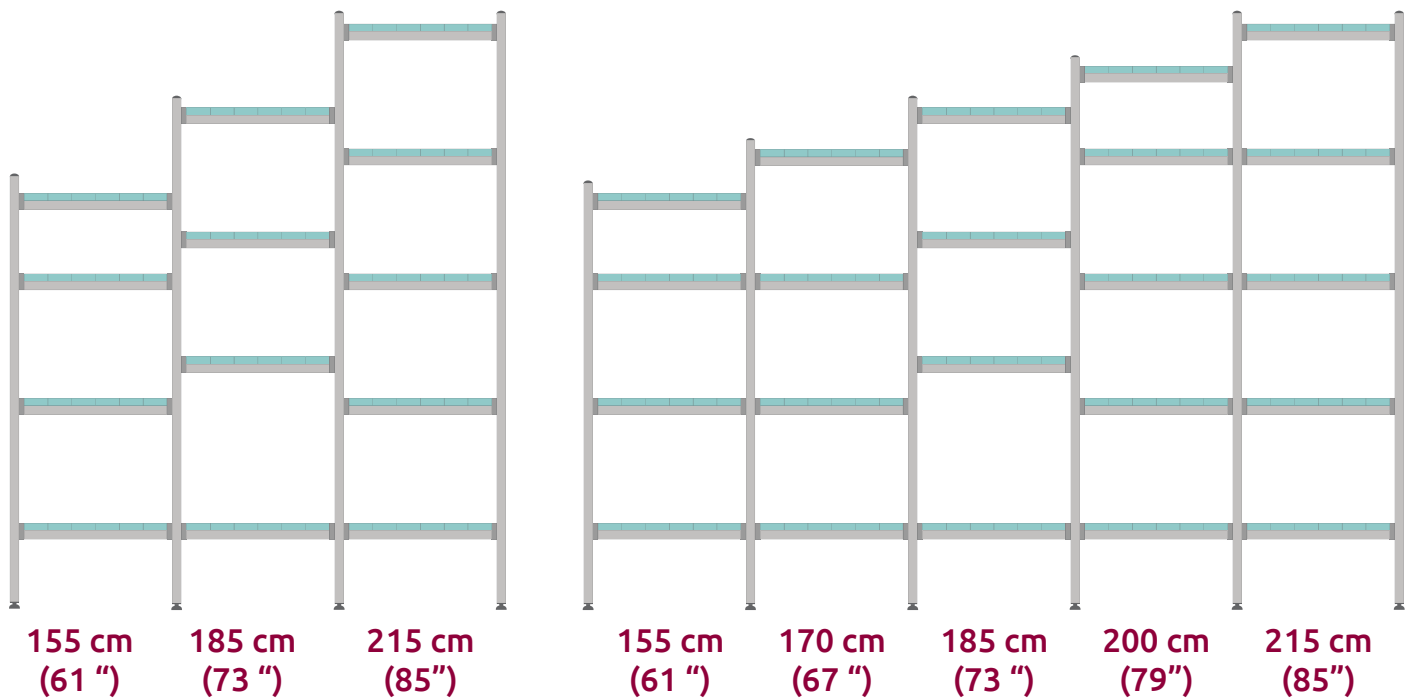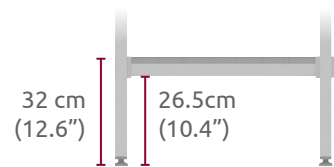

* Additional heights are available on special order request


2 FRAME DEPTHS (D)

SELECT THE DESIRED DEPTH AND HEIGHT

A depth of 60 cm and a depth of 45 cm. Each of the depths provides 5 heights

45cm Depth


* Each frame comes with leveling feet

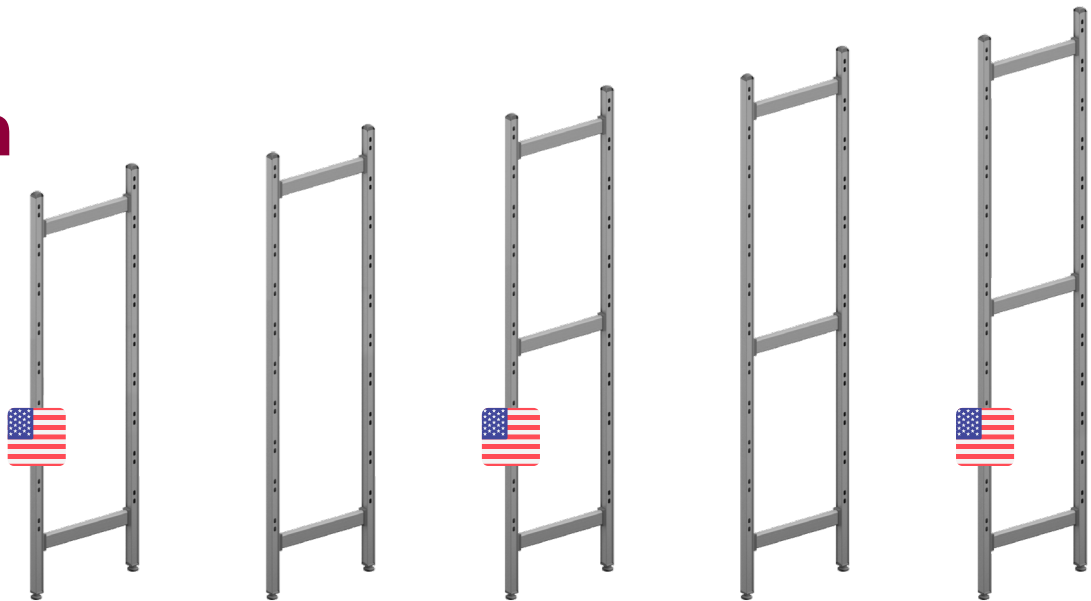

Item Number:	KFC448	KFC450	KFC451	KFC452	KFC453
Dimensions:	D 45cm (17.7") H 155 cm (61")	D 45cm (17.7") H 170cm (67")	D 45cm (17.7") H 185 cm (73 ")	D 45cm (17.7") H 200 cm (79")	D 45cm (17.7") H 215 cm (85")


60cm Depth

* Each frame comes with leveling feet

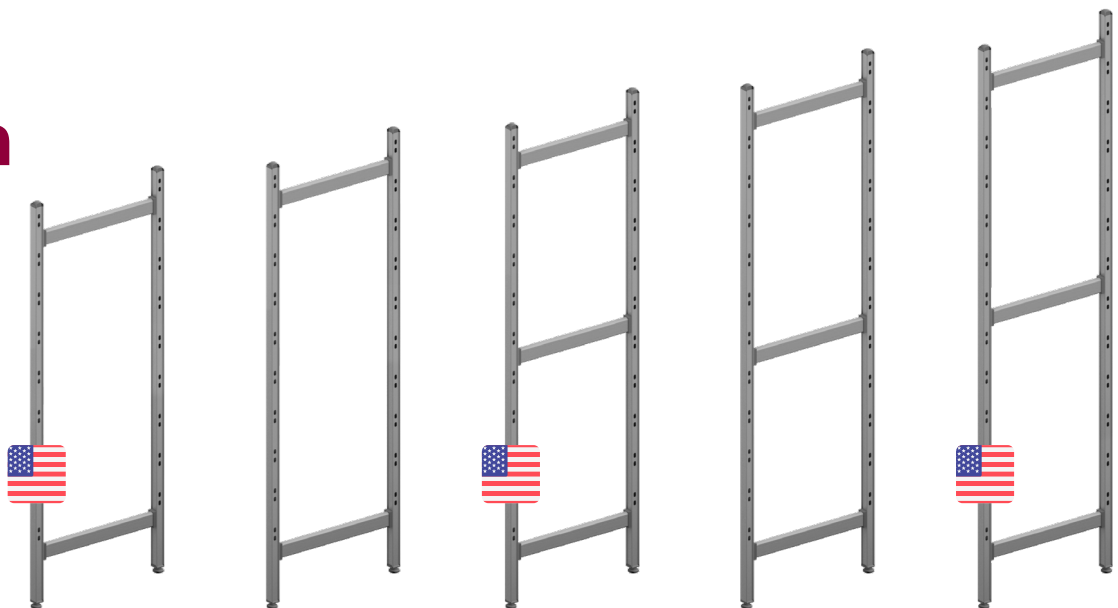

Item Number:	KFC598	KFC600	KFC601	KFC602	KFC603
Dimensions:	D 60cm (24") H 155 cm (61")	D 60cm (24") H 170cm (67")	D 60cm (24") H 185 cm (73 ")	D 60cm (24") H 200 cm (79")	D 60cm (24") H 215 cm (85")

Each frame is provided in a flat package:



MaxSalus


STEP BY STEP

SHELF PLACEMENT OPTIONS

Examples of possible shelf configurations with different heights (The red number above each column represents the amount of shelves)


MaxSalus 155 cm (61")

Fits rooms with ceiling higher than > 170cm | 67"

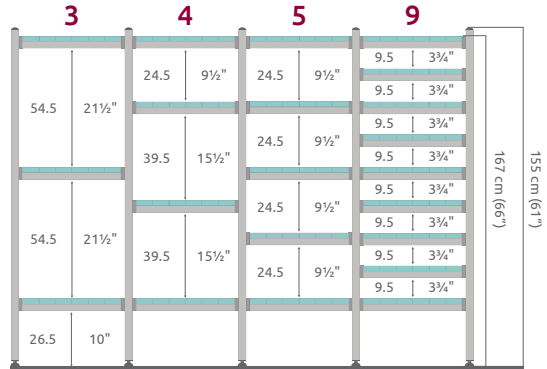


MaxSalus 170cm | 67"

Fits rooms with ceiling higher than > 195 cm (77")

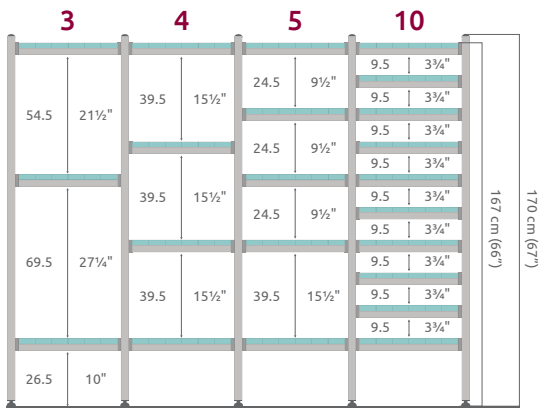


MaxSalus 185cm | 73"

Fits rooms with ceiling higher than > 210 cm (83")

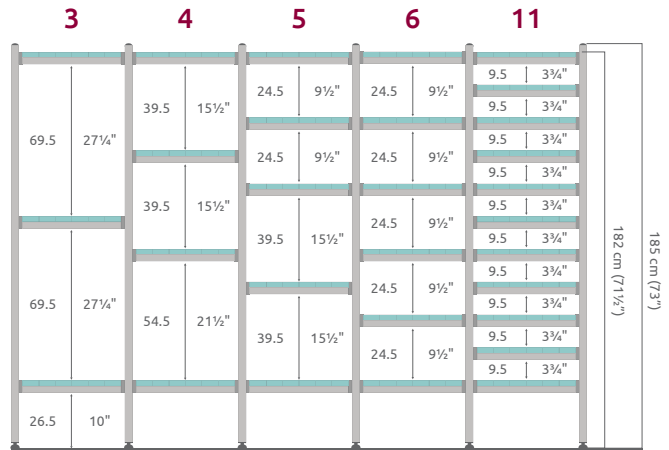


MaxSalus 200cm | 79"

Fits rooms with ceiling higher than > 225 cm (89")

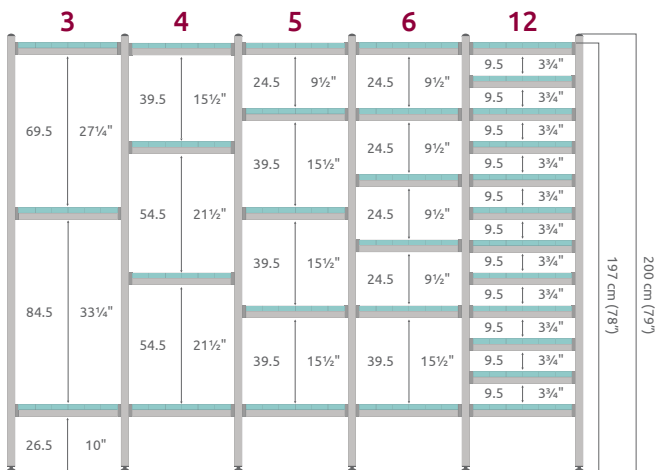

MaxSalus 215cm | 85"

Fits rooms with ceiling higher than > 240 cm (95")

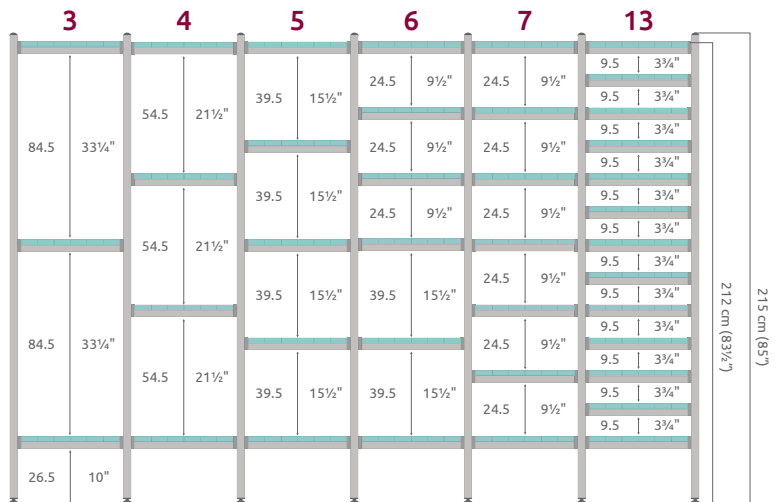


5 SHELVES LENGTH (L)

STEP BY STEP

STEP 2 - SHELVES

The MaxSalus & TopSalus series available in 2 depths, each depth is available in 5 lengths

45cm (18") Depth

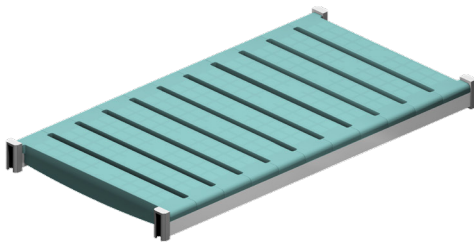

MAXSALUS SHELF


Item Number	Description
KFS454-AB	MaxSalus Shelf D 45cm (17.7") L 85cm (34")
KFS458-AB	MaxSalus Shelf D 45cm (17.7") L 100cm (39")
KFS462-AB	MaxSalus Shelf D 45cm (17.7") L 115cm (45")
KFS466-AB	MaxSalus Shelf D 45cm (17.7") L 130cm (51")
KFS470-AB	MaxSalus Shelf D 45cm (17.7") L 145cm (57")



TOPSALUS SHELF

Item Number	Description
KFS454	TopSalus Shelf D 45cm (17.7") L 85cm (34")
KFS458	TopSalus Shelf D 45cm (17.7") L 100cm (39")
KFS462	TopSalus Shelf D 45cm (17.7") L 115cm (45")
KFS466	TopSalus Shelf D 45cm (17.7") L 130cm (51")
KFS470	TopSalus Shelf D 45cm (17.7") L 145cm (57")

60cm (24") Depth

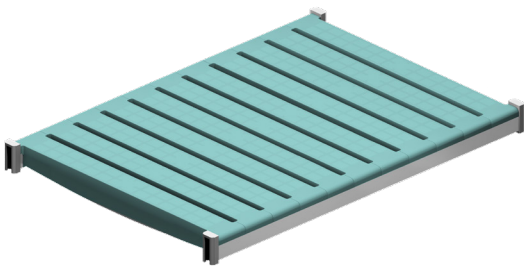

MAXSALUS SHELF


Item Number	Description
KFS604-AB	MaxSalus Shelf D 60cm (24") L 85cm (34")
KFS608-AB	MaxSalus Shelf D 60cm (24") L 100cm (39")
KFS612-AB	MaxSalus Shelf D 60cm (24") L 115cm (45")
KFS616-AB	MaxSalus Shelf D 60cm (24") L 130cm (51")
KFS620-AB	MaxSalus Shelf D 60cm (24") L 145cm (57")



TOPSALUS SHELF

Item Number	Description
KFS604	TopSalus Shelf D 60cm (24") L 85cm (34")
KFS608	TopSalus Shelf D 60cm (24") L 100cm (39")
KFS612	TopSalus Shelf D 60cm (24") L 115cm (45")
KFS616	TopSalus Shelf D 60cm (24") L 130cm (51")
KFS620	TopSalus Shelf D 60cm (24") L 145cm (57")

Each shelf is supplied assembled in a single package, just remove the plastic and install it in the Salus frame

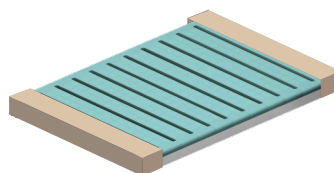

Corner KIT

WITH THE CORNER KIT YOU CAN INCREASE AND OPTIMIZE THE STORAGE CAPACITY

KFA600

TopSalus Corner KIT for 60cm (24") Depth

KFA450

TopSalus Antimicrobial Corner KIT for 45cm (18") Depth

Assembly in three simple steps:



(1) Replace the 2 slots with the corner pieces in the KIT

(2) Connect the right and left connectors into the slots

(3) Connect the shelf directly to the corner supports



I-SHAPE



L-SHAPE




U-SHAPE


Accessories

A variety of complementary accessories that can help to meet specific needs

WALL MOUNT & FIXATION SOLUTIONS

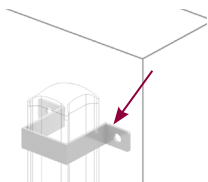


KFSFP2
Wall Mount Clamp
Omega For Frames

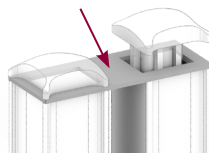

KFSAS2
Matching Frames Bracket

FALL BARS


Salus Side Bars

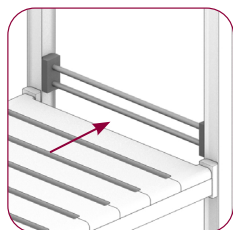

KFG600
Salus Side bar 60cm (24")

KFG450
Salus Side bar 45cm (17.7")

Salus Back Bars

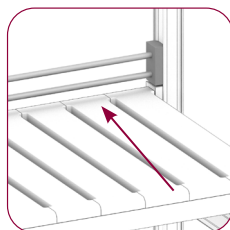

KFGT10
Salus back bar 85cm (34")

KFGT12
Salus back bar 100cm (39")


KFGT14
Salus back bar 115cm (45")

KFGT16
Salus back bar 130cm (51")

KFGT18
Salus back bar 145cm (57")

LABEL SYSTEM AND LABEL STICKERS

To prevent sticking directly on the system and maintain proper hygiene, it is recommended to use the designated labeling tags, for quick and easy labeling replacement

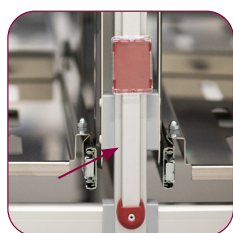

LHPROF-0925
Salus label rail 92.5 cm (36.4")


LBLHLD
Ruby label holder,
Horizontal

LBLHLD-VER
Ruby label holder, Vertical

LBL-HORZCOV
Label cover, Horizontal

LBL-VERCOV-N
Label cover, Vertical

MORE ACCESSORIES

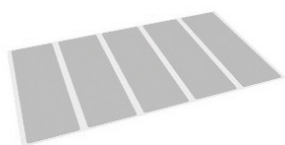


KFSET2
Adhesive labels with 5
sealing holes (pack of 10)

Each frame comes with 5 spare stickers per frame, and it is recommended to keep them in case it is necessary to change the height of a shelf. If you run out, order the following item

High Density Kit

UP TO 60% MORE STORAGE CAPACITY


high-density top-rail shelving is characterised by its incredible strength and high load capacity

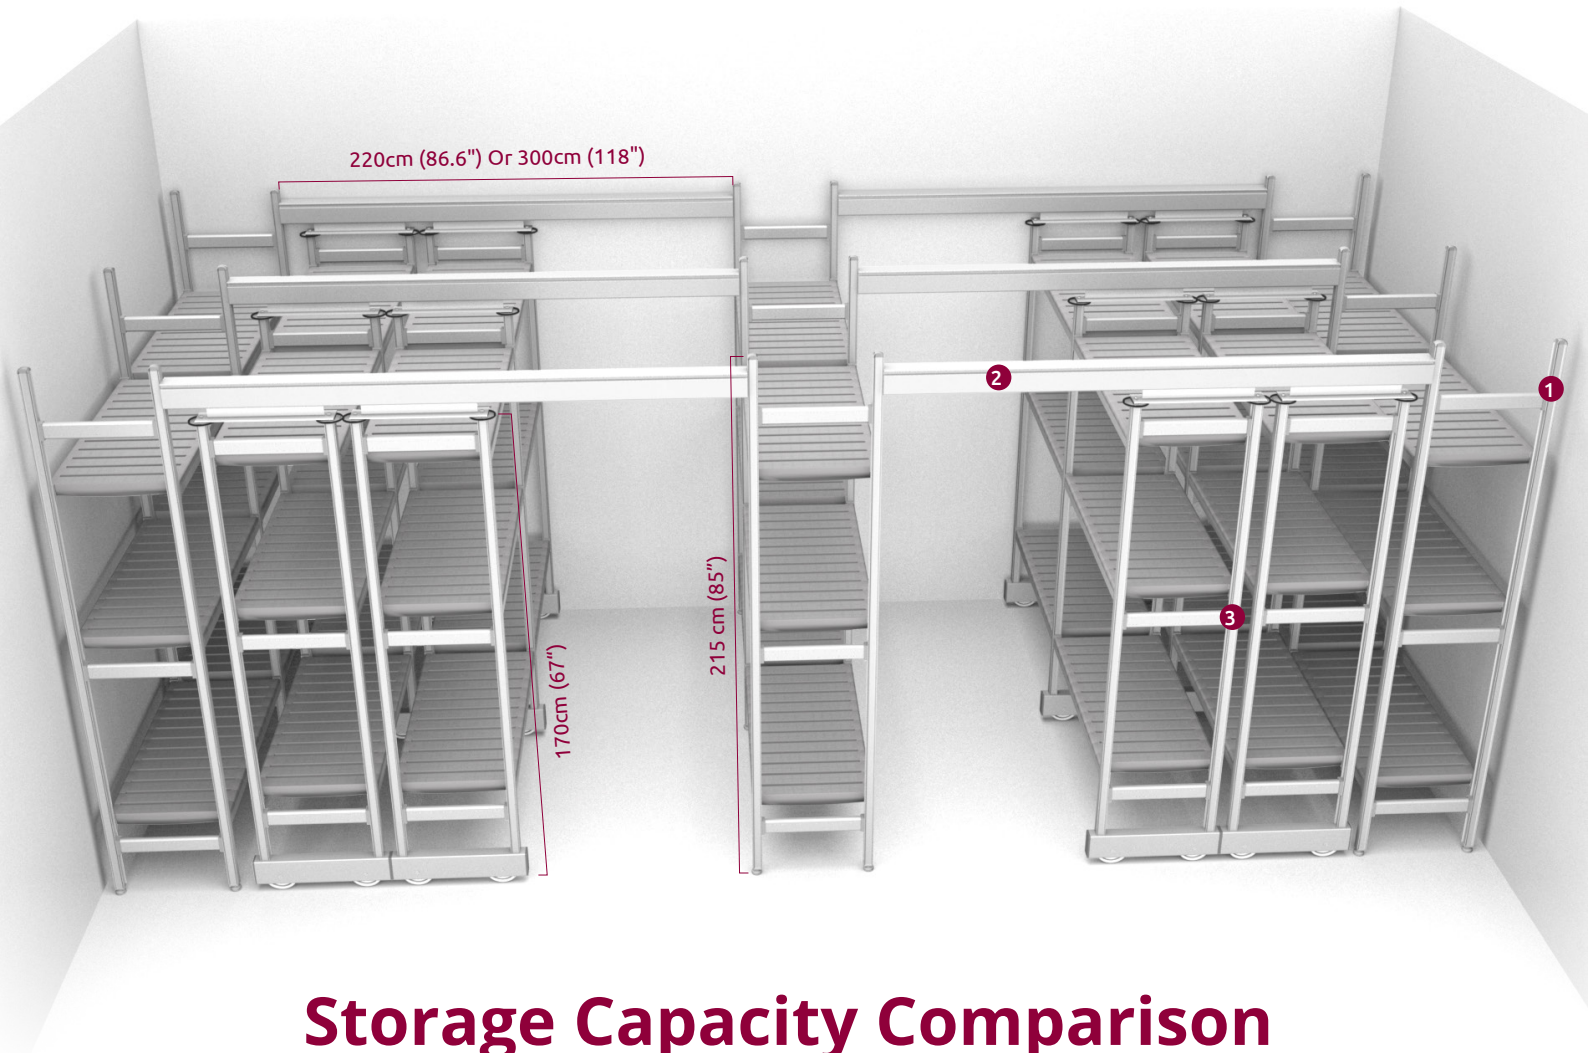


Storage Capacity Comparison

Static Units vs. High Density Units

Room dimensions : 14¾' x 29½' = 436 sq ft | 4,5 x 9 m = 40.5 m²

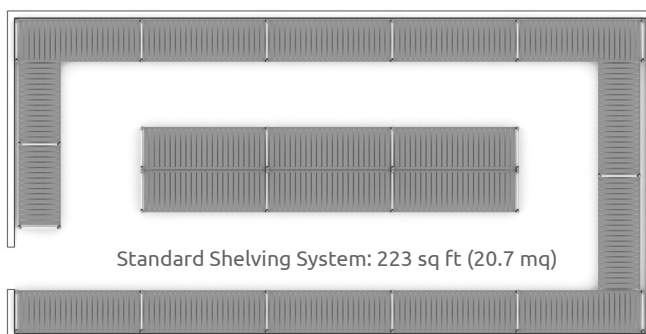

Furnished storage facility with static units

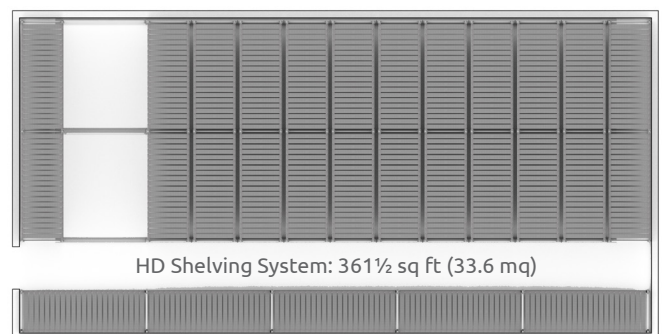

Furnished storage facility with High density System

MaxSalus SuperCart

250Kg
550lb
Per unit!



with Injected
Antimicrobial
supplement



How to order

SALUS SUPER CART 250KG


Kit includes 2 single-sided frames **Installed** with 4" wheels, 2 lockable 4" front swivel wheels, 2 non-locking 4" rear swivel wheels, and 4 bumpers. Recommended to be installed with 4 shelves. Height cart 180cm (71"). Load capacity 550 lb (250 kg).

To calculate the length of the cart, add 10cm (4") to the length of the shelf you have chosen to install in the kit



Item Number	Description
TOP-SR185-45	Pair of Salus super cart frames D 45cm (17.7") H 180cm (71") 550 lb (250 kg) & max 4 shalves
TOP-SR185-60	Pair of Salus super cart frames D 60cm (24") H 180cm (71") 550 lb (250 kg) & max 4 shalves

IT IS RECOMMENDED TO ADD BACK FALL BARS TO PREVENT THE EQUIPMENT FROM FALLING WHILE THE CART IS BEING MOVED

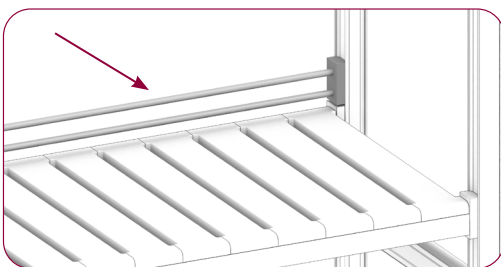


Item Number	Description
KFGT10	Salus length bar 85cm (34")
KFGT12	Salus length bar 100cm (39")
KFGT14	Salus length bar 115cm (45")
KFGT16	Salus length bar 130cm (51")
KFGT18	Salus length bar 145cm (57")

EXAMPLE OF AN ORDER TABLE FOR A SUPER CART:



ORDER BASED ON THE IMAGE:

Item Number	Qty	Description
TOP-SR185-45	1	Pair of Salus super cart frames D 45cm (17.7") H 180cm (71") 550 lb (250 kg) & max 4 shalves
KFS462-AB	4	MaxSalus Shelf D 45cm (17.7") L 115cm (45")
KFGT14	4	Salus length bar 115cm (45")

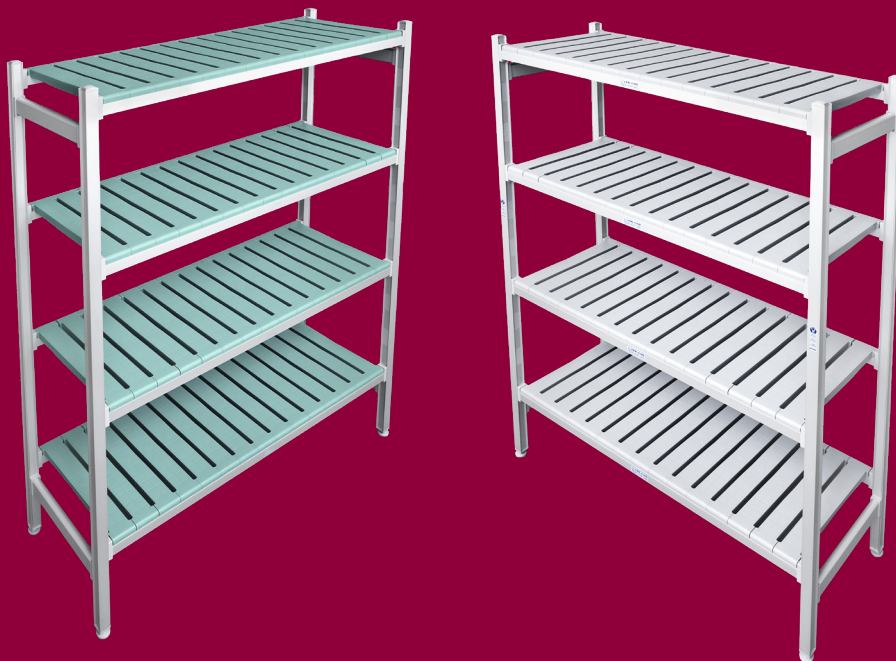

CONTACT US FOR MORE DETAILS

+1 888-276-4750 | info@pegasusmedical.net | www.pegasusmedical.net

USA / CANADA
905 E. Rose St Lakeland
FL 33801 - USA

EUROPE / MIDDLE EAST / ASIA
V. Croda Granda 13a 31027
Spresiano (TV) - Italy